

Camera Underwater Housing – P6000 (Nikon)

User Manual



Contents:

- 1. Introduction**
- 2. Specifications**
- 3. Function Controls**
- 4. Set up Instructions**
- 5. Use & Care of Housing**
- 6. Service**
- 7. Warranty**

1. Introduction

10BAR Underwater Housings are small, light and rugged enough to be used on every dive. Use of a clear polycarbonate allows for visual inspection of camera condition and the O-ring seal. 10BAR Housings are designed for the ever -increasing variety of models of digital still and video cameras. Advanced computer aided design and CNC manufacturing technologies ensure precise dimensions. Each housing body is first injection molded, and then machined to configure to individual camera model. A range of lens ports and controls are fitted, to tailor the housing to your camera model. Now you can use small cameras with the feel and function of professional housings.

2. Specifications

| | |
|------------------------|---|
| Test Pressure | Housings individually tested to 10 Bar (90 m / 300 ft.) Recommended working pressure 60 m |
| Closure Design | O-ring, Air Lock |
| Body Material | Polycarbonate |
| Overall Size | 115 x 117 x 110 mm (LxWxH) |
| Total Weight | Approximately 0.85 kg (Housing only) |
| Buoyancy (with camera) | Slightly negative in salt water |
| Features | Visible main O-ring for final pre-dive check O-ring design on all controls Bulkhead and hot shoe plug for External SB900 e-TTL strobe |

| | |
|-------------|---|
| Accessories | Opening key / Lever (included) Spare main O-rings (included) Silicone O-ring grease (included) Carrying bag (included) Red filter (optional) Extension arm for strobe or video light (optional) Macro and Wide Angle lens (optional) Housing for Nikon SB 900 Flash (optional) |
|-------------|---|

3. Function Controls

3.1 Buttons & Parts

- (1) **BULKHEAD**
- (2) **MODE DIAL**
- (3) **ZOOM**
- (4) **ON/OFF**
- (5) **SHUTTER**
- (6) **PRESSURE RELEASE PLUG**
- (7) **FLASH ON**
- (8) **LIVE VIEW**
- (9) **CURSOR**
- (10) **FUNCTION / MY MENU**
- (11) **MANUAL FOCUS**
- (12) **FLASH / SELF-TIMER / FOCUS / MACRO**
- (13) **OK**
- (14) **PLAYBACK / SHOOTING MENU**
- (15) **DELETE**
- (16) **Monitor**



3.2 Control Details

- (1) **BULKHEAD** – for connecting sync cord, unscrew the blank plug and install the sync cord.
Always keep the blank plug in place if sync cord is not installed
- (2) **MODE DIAL** - press down and turn to select the required mode
- (3) **ZOOM** – turn to activate the zoom function
- (4) **ON / OFF** – align the white dot towards the lid, press and turn on and off
- (5) **SHUTTER** – press to activate the shutter

- (6) **PRESSURE RELEASE PLUG** – To open the housing, the pressure release plug must be first unscrewed and then pulled out all the way
- (7) **Flash** – align the white dot towards the lid, press down and turn towards the “lighting” logo, the flash should pop up
- (8) **LIVE VIEW** – press to activate the monitor button
- (9) **CURSOR** - rotate until the white dot is over the required direction and press
- (10) **FUNCTION / MY MENU** – rotate until the white dot align and press, when not in use rotate the white dot towards the down to facilitate the “cursor” function
- (11) **FOCUS** – press to activate / confirm
- (12) **Cursor** – rotate until the white dot is over the required direction and press, when not in use rotate the white dot towards the screen to facilitate function
- (13) **Menu / Set** – rotate until the white dot align and press, when not in use rotate the white dot towards the down to facilitate the “cursor” function
- (14) **PLAYBACK / STOOTING MENU** – press and turn to select
- (15) **DISPLAY / DELETE** – rotate until the white dot align and press
- (16) **Monitor** – monitor display

For the full list of camera functions and settings accessed by each control, please consult the Nikon P6000 camera instruction manual.

4. Set up Instructions

4.1 Air Lock:

The body and lid are designed with the Air Lock system “no clip” closure arrangement. Testing has shown that this arrangement allow the water to exert an even pressure on the O-ring, increasing the reliability of the watertight seal.


4.2 Pressure release plug

To open the housing, the pressure release plug must be first unscrewed and then pulled out all the way (**Counter-clockwise**).

This provides a passage for the air to pass though and eliminate the pressure different between the inside of the housing and the ambient.

The plug insists of an internal double O-ring seal on the stainless steel slide shaft.

These internal O-rings form the watertight seal. There is also a large outer O-ring under the knob. This O-ring serves to prevent contamination of the slide shaft, with dirt, salt etc., and is not required for watertight integrity. If this O-ring should become detached, it can simply be pushed back in place.

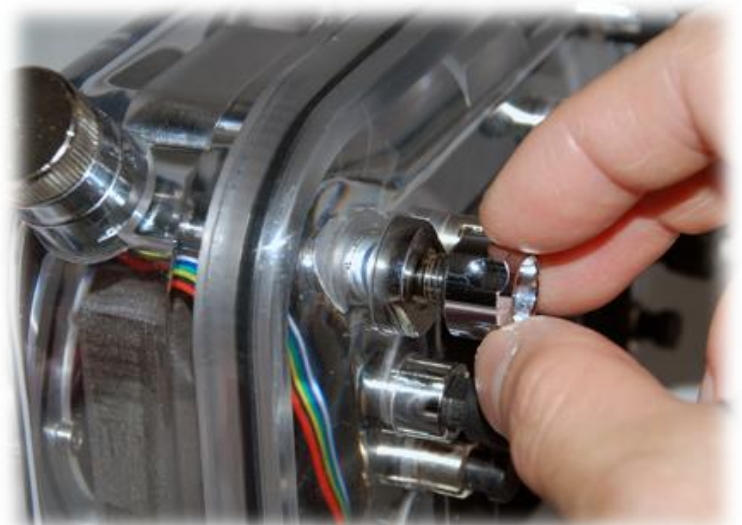

4.3 Opening levers

After unscrewing and pulling out the pressure release plug, the lid can be opened. To overcome the friction of opening, use lever to push against the lid with a cam action. Be sure they are inserted all the way flat to the housing before turning to avoid damaging the protrusions on the lid. The body has four holes on each corner edges for opening. Gently lever off the lid with the supplied opening lever taking care not to twist the lid excessively. The lid should be opened keeping it approximately paralleled to the body at all times, turn first one corner a little, then the other a little, and repeat again until the lid is opened. Remember to unscrew and pull out the pressure release plug all the way first, otherwise the air pressure will resist attempts at opening. Lay the lid on a flat stable surface after opening.



4.4 Special note on responsibility for watertight integrity

Each housing is individually inspected and hydrostatically tested in the factory. The design of the main piston O-ring seal is among the most reliable in the industry and the watertight integrity is excellent. This special O-ring design provides a perfect seal even if there is any movement between the body and lid due to change of ambient pressure. However please note that responsibility for ensuring the integrity of the watertight seal lies entirely with the user. 10BAR accepts no liability for damage to, or loss of any equipment used with, or placed inside the housing. *Users are highly recommended to carry out in-water test of the housings without installing of the camera for their first dive, after change of new ports or alternation of any new configuration. The test can be carried out by lowering the housing with ballast to the working depth or dive down to the safe diving range.*

The O-ring seal is the main barrier between the water outside and the air space within the camera. It is an effective barrier only if the seal is properly maintained. The O-ring seal should be inspected before every dive. The following information is provided for guidance in using and maintaining the O-ring seal.

4.5 Maintaining the O-ring Seal

If the main body to lid O-rings are not installed, install the O-rings before diving. Their care and maintenance are critical to the watertight integrity of the housing. If the O-rings are contaminated, or not already installed; inspect, grease and install the O-rings according to the following guidelines.



4.6 Inspection, cleaning and re-installation of the O-ring Tools

A soft cotton bud or sponge applicator, make sure these are free of all contamination such as loose fibers, and the tube of silicone grease supplied with the housing. Note other types of silicone grease specifically for use with underwater camera equipment can usually also be used. It is advised to carry out the following procedure on a firm clean level surface, e.g. at a table, to prevent skidding especially when diving from a boat.

When to maintain the O-ring seal

Remove the O-ring periodically for inspection. It is not necessary to remove, clean and re-install the O-ring after every dive provided the O-rings are not become contaminated. As a rule of thumbs set up the camera and housing before a day's diving. If the housing is required to be opened between dives for changing memory card or re-charging batteries, make sure the outside of the housing is thoroughly toweled dry before opening up. After removing the lid and servicing the camera, replace the lid straight away, rather than leaving it lying around. Before replacing the lid, check the o-rings and make sure that no contamination such as dust, hair, salt, sand etc. has fallen onto the O-ring or O-ring recess, as a precaution we recommend to inspect the O-ring every time the lid is opened and to carry out the maintenance only if necessary.

Procedure

- I Place the lid on a firm non-slip level surface.
- I The O-ring can be extracted using an O-ring extractor tool (make sure the tool as no sharp edges). Alternatively use the flats of the thumbs to gently stretch the O-ring on two faces thus making a small loop protruding a few mm. The loop





can then be grasped between finger and thumb, to pull the O-ring over the lip. Clean the O-ring recess (the square groove where the O-ring sits) with a cotton bud.

- I Inspect the O-ring all the way round its surface for damage such as cuts tears or contamination. This should be done visually and also by feeling the surface texture between finger and thumb.
- I **IF THE O-RING IS DAMAGED OR SUSPECTED OF BEING DAMAGED, DISCARD IT IMMEDIATELY.**

A spare O-ring is supplied with your housing, or a replacement O-ring can be ordered from 10BAR. If the O-ring is contaminated or suspected of being contaminated, clean it with a cotton cloth that is free of all chemicals or contamination. After cleaning inspect the O-ring again.

Once the O-ring has been inspected and verified fit for use, apply a small amount of silicone grease to the O-ring. The silicone grease must be evenly distributed round the O-ring. Replace the O-ring into the groove; run a finger round the O-ring, to make sure it is snugly seated in the groove.

4.7 Mounting the camera in the housing:

Remove the lens cap and wrist strap. Check the white dots on the control “Flash on”, “On/OFF” and “Aspect Ratio” are facing the Housing Cover Lid.

Slide the camera into the body along the rubber packing. Make sure the camera body reach the limit and test the function of the On/Off button on the body of the housing.

Check the bulkhead cable is not jammed under any button or over the o-ring



Slide the hot shoe plug into the hot shoe



Replace the lid and make sure the lever is perpendicular to the side wall of the housing. Lock the lid by press down the lever and turn until the lever is parallel to the side wall of the housing. After replacing and locking the lid, make a final visual inspection of the main O-ring for contamination.

Note: If the O-ring is in good contact, a thin black line, about 0.5 to 1mm in width should be visible, where the O-ring is in contact with the lid. Follow this line all the way round the edge of the seal, as a final check that the seal is good.

4.6 Mounting the camera Wide Angle lens:



The housing is now ready for the dive.

Important !!! Check the o-ring seal on the lid and should see an even and continuous pressed o-ring path of about 0.5 – 1 mm thick

5. Use & Care of Housing

5.1 Pre Dive Function Check.

Just before entering the water, make a habit of reviewing that you have carried out the proper steps to close the housing and the bulkhead is connected. Make a visual check of the O-ring seal. It is also useful to switch on the camera, and check that controls e.g. on/off, zoom, shutter functions operate normally.

- | Check housing is closed
- | Check O-ring is in the groove between housing and Acrylic
- | Check battery and memory card status on the LCD display
- | Check control knob and zoom function.

Always avoid submerging the housing in hot water for a prolonged time or a cleansing tank where the water may be heated up by the sun.

5.2 General Operation.

The control levers and push buttons consist of internal double O-ring seals on a stainless steel shaft. This arrangement is very reliable, however as a precaution, when operating the controls, avoid excessively rapid movements, as this may distort the O-ring. Also please allow for the fact that the camera takes a few seconds to power on. If the camera does not appear to respond to a control action, make sure that no other controls are pressing on the camera, i.e. locking out further actions.

Wear the wrist strap; it is easy to inadvertently let go of the housing, especially if you are distracted.

5.3 Cleaning & Storage.

The body & lid of the housing are made of 6061 Aluminum and Acrylic respectively. 6061 Aluminum is selected for its outstanding strength stiffness, hardness and toughness, While Acrylic for its crystal clear transparency and high gloss surface. Both of them have good resistance to weathering, although long-term exposure to sunlight should be avoided. Normal operating temperature range is 3°C to 36°C (Storage temperature: -10°C to 50°C)

It is good practice to rinse off your housing with fresh water after every dive. Avoid to exposure to fine sand. After a series of 10 or more dives, e.g. after a dive holiday, it is recommended to immerse the housing for 2-3 hours in warm water to dissolve any salt deposits that may have built up. No chemical cleaners should be used.

Important : For long term storage please remove the main closure o-rings from body.

5.4 Transportation.

Please protect the housing during transportation. It is recommended to remove the handle, and shutter extension, and wrap the camera in foam or bubble wrap.

5.5 Accidents

The impact resistance of the housing is excellent. However after an accident the alignment of the housing may have been altered. Therefore in the event of your housing suffering an impact force, e.g. being dropped, it is essential that you do not use the housing for diving. Please return the housing immediately for service and put a note inside to indicate the nature of the accident, so that the severity can be assessed.

6. Service

To ensure the continued performance of your housing, it should be serviced every year, or after every 200 dives whichever is earlier. Please note the terms for servicing the housing posted at our website. A full service will include:

**Inspect all components for wears or damage (report if repair necessary),
Clean all sealing surfaces,
Replace all O-ring seals,
Hydrostatic pressure test to 10 Bar.**

Note: Replacement of damaged components may require additional cost.

7. Warranty

The warranty is valid within two years from the date of first purchase. The warranty applies only to the housing itself. 10BAR does not accept any liability either implicit or otherwise for any equipment housed inside, or used together with the housing. In the event of the housing flooding within the period of warranty, 10BAR will repair or replace the housing. Please note that disassembly of the housing will invalidate warranty. Please fill in the information below, and return a copy to 10Bar Underwater Housing at the address below, to validate the warranty.

(Copy to be retained by user)

| | |
|--|--------------------|
| Housing Type : | Date of Purchase : |
| Serial Number : (Labeled inside housing) | Dealer : |
| Owner's Name : | e-mail : |
| Owner's Address : | Tel : Fax : |

Office & Showroom:

Unit C, 2/F., Wing Hin Factory Building, 31-33 Ng Fong St., San Po Kong, Hong Kong.

Tel: (852) 2573 3228 Fax: (852) 2811 9180

Email: service@10bar.com Web site: <http://www.10bar.com>

Please keep this document for future reference

(Note: due to continuous improvement the latest model housing may differ slightly from those described in this document)

(Copy to be returned to 10 Bar Underwater Housings)